

## MANUAL RELEASE INSTRUCTIONS

1. Secure the gate firmly in position so it cannot inadvertently move, which may cause accidental damage or injury to property or person once the gate operator is released.
2. Open the small hinged door of the operator cabinet using the key and gain access to the manual release knob.
3. Turn the knurled knob anti-clockwise about half a turn to release the gate.



4. The gate can now be opened manually. Once it is in the open position, ensure the clutch is re-engaged or the gate is firmly secured by other means to prevent the gate from inadvertently moving, which may cause accidental damage or injury to property or person.
5. To re-engage the clutch, turn the knurled knob clockwise until it is very tight. If, when turning the knurled knob clockwise, it just spins, try spinning it clockwise with more force to release it off the hexagonal retaining nut OR hold the nut with one hand and turn the knurled knob clockwise with the other hand.

## MAINTENANCE DETAILS

**Warning: Failure to properly maintain equipment may result in injury or death, and damage to property and equipment**  
**Failure to follow the prescribed maintenance procedure may void the manufacturer's warranty.**

Recommended maintenance to be performed on the operator and gate are as follows:

Operator performs over 150 cycles per day:	every month
Operator performs between 100-150 cycles per day :	every 2 months
Operator performs between 50-99 cycles per day:	every 4 months
Operator performs between 20-49 cycles per day:	every 6 months
Operator performs under 20 cycles per day:	every 12 months

**NOTE: Chains on Chain Sliders must be oiled at least every two months.**

**Before commencing maintenance on the gate or operator, isolate the electrical supply and ensure the system is de-energised.**